


# Maintenance Instructions ClimaRad MaxiBox

## Removing and cleaning the ClimaRad MaxiBox


How do you maintain your ClimaRad MaxiBox?

Depending on its use, the ClimaRad MaxiBox must be thoroughly cleaned every 4 years.


When used in a very polluted area we recommend that you check every year to see if cleaning is required.

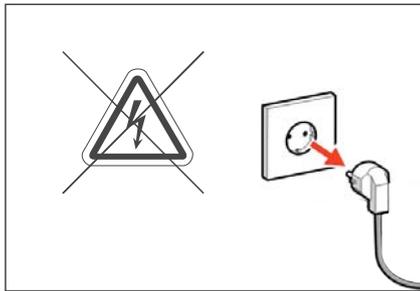


1. When maintenance is carried out the ClimaRad MaxiBox should not be connected to the power supply. Remove the plug from the socket.

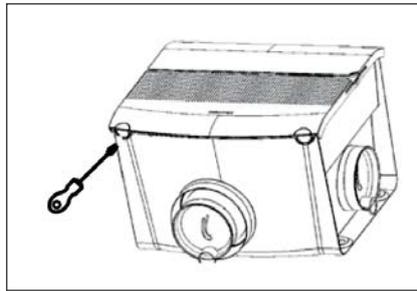

2. Remove the front cover using a flat screwdriver. Behind this cover are the electric wiring, motor and circuit board located.

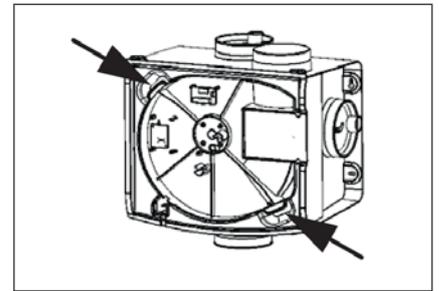


3. Remove the motor plate using the two handles (see arrows).

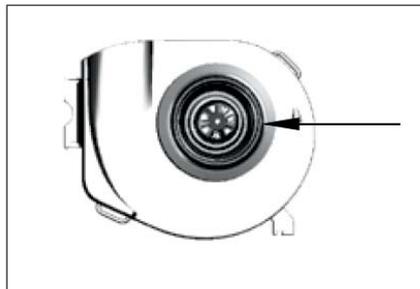

4. Inspect and clean the motor. Make sure all dirt is removed from the impeller.



5. Take the snail-shaped element carefully out of the air inlet plenum and clean both parts.

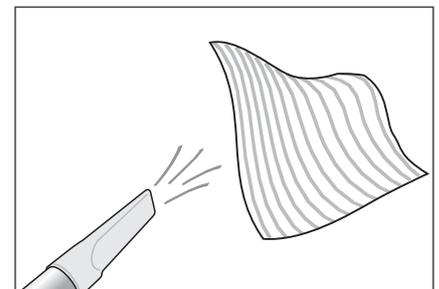

6. Use a soft, lint-free cloth or vacuum cleaner to clean the components (do not use water).



7. Replace all parts and connect the power supply.