


Maintenance instructions: ClimaRad S-Fan(+)


Changing the filter

When should you replace the filter of your ClimaRad S-Fan(+)?


The filter of the ClimaRad S-Fan(+) should be replaced once every two years on average or when the message "filter vervuild" is visible in the display.

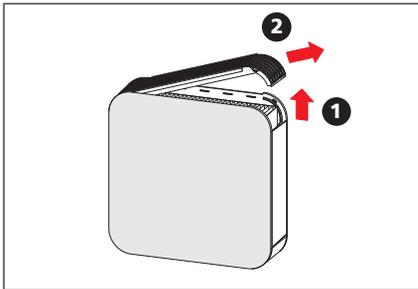

1. Raise the top cover on the right side and slide it slightly to the right.

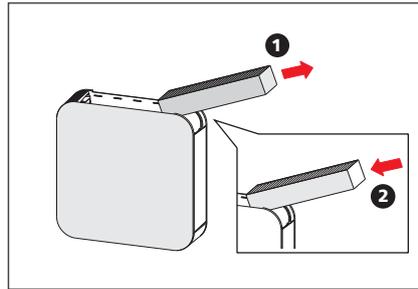

2. Remove the old filter and slide the new filter into the device. Replace the cover.

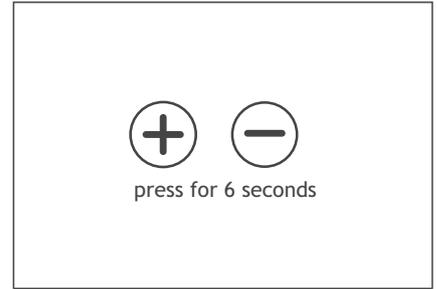



3. Reset the filter hour counter after replacement by pressing the + and - buttons on the control panel simultaneously for 6 seconds. The message "filter vervuild" should disappear.

Cleaning the insect screen and fan


The insect screen and fan of your ClimaRad S-Fan(+) should be checked and cleaned once every two years on average.

1. Slide the locks on the right and left side upwards and then tilt the unit forwards. This procedure disconnects the unit automatically from the mains supply.

Be careful! The device will be completely detached from the wall

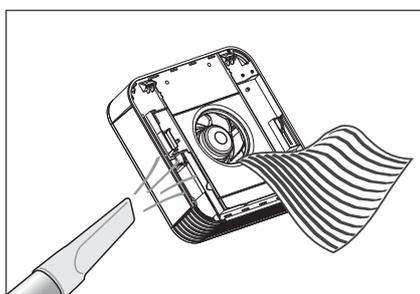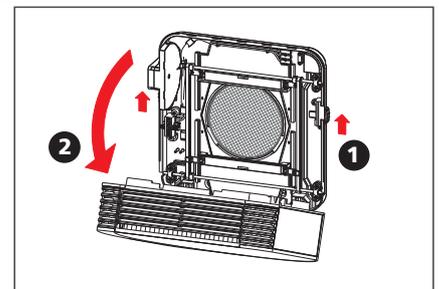


2. Clean the fan with a dry, lint-free cloth or vacuum cleaner.

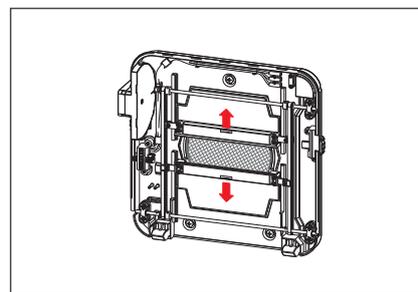

3. If necessary, open the flaps manually.

If these are locked, wait a few minutes until the flaps can be opened easily.

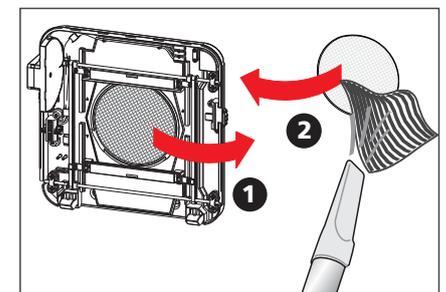

4. Remove the insect screen manually and clean it with a dry, lint-free cloth or vacuum cleaner.

After cleaning, replace the insect screen and appliance and slide the locks on the left and right side downwards.