


User instructions ClimaRad S-Fan+ (with Heating Element) Excl. Room Thermostat

Operation of the ClimaRad S-Fan+

The ClimaRad S-Fan+ achieves optimal air quality through ventilation combined with heating. This unit can be used in two different ways: Ventilate Only, and Heat and Ventilate.

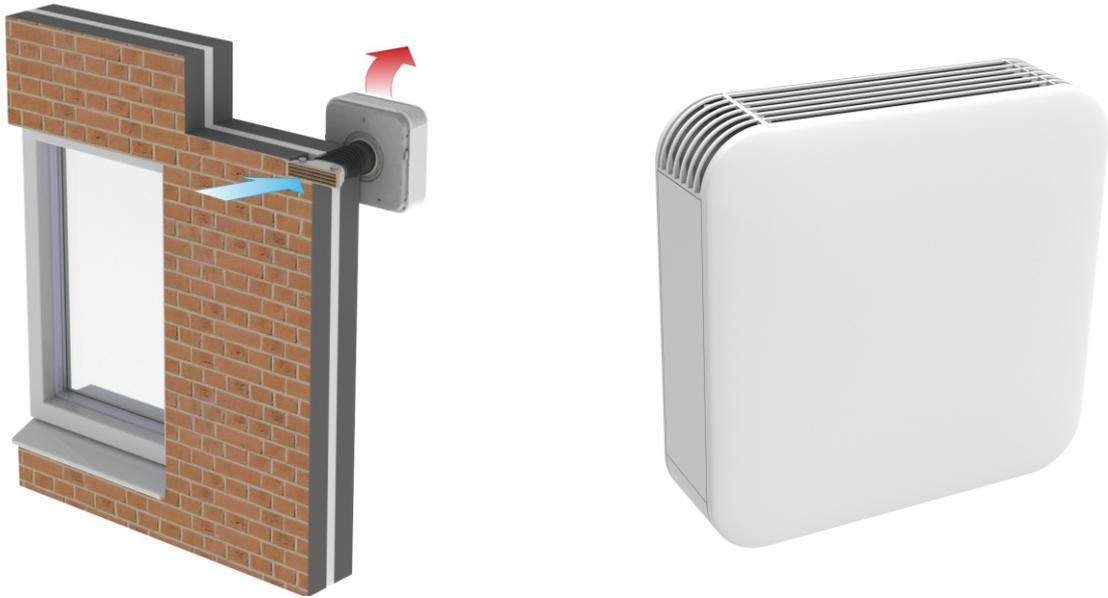

Please note! The air supply opening must always remain open and unimpeded!

Operation ClimaRad S-Fan+

The ClimaRad S-Fan+ can be operated with the control panel on the bottom of the unit.
No room thermostat is present.



Control panel

Function keys ventilate

AUTO



Automatic control. Room ventilation is automatically controlled by your ClimaRad S-Fan+, which ventilates based on CO measurement and RV. Press 2 to switch off the heating function.



Manual: manual ventilation with outside air:

You can set your desired ventilation speed using the + and - buttons on your control panel. After a period of 4 hours, the ClimaRad S-Fan+ switches back to automatic control. Use this function in summer, for example, when you want to lower the temperature in your heated room by a few degrees at night (summer night ventilation).



Pause/Off. Use this function if you (temporarily) do not want to ventilate and/or heat. After a period of 2 hours, the ClimaRad S-Fan+ switches back to automatic ventilation control. Press the button for 5 seconds to switch off the unit. In emergencies, you can use this function to switch off the device.



Comfort mode. The ClimaRad S-Fan+ preheats the outside air to 12°C for a period of 8 hours.

AUTO



AUTO



Air quality. Increase or decrease the desired air quality.

Function keys heating and ventilation



Heating. The ClimaRad S-Fan+ starts heating the room when you activate this function. After a period of 4 hours, the ClimaRad S-Fan+ switches back to automatic ventilation control.

The + and - buttons on your control panel  • • • • • 
1 2 4 6 10 hour



Heating rate. Increase or decrease fan speed to heat faster or slower.



Child lock. The child lock is enabled when you press and hold the three buttons for 4 seconds (when the heating mode is on).

Messages



Child lock. The child lock is switched on. Press and hold the three buttons for 4 seconds to switch it off.



Press 4 seconds simultaneously



Malfunction. A malfunction has occurred. Contact your technician or housing corporation.



Dirty filter. Replace the air filter or contact your technician or housing corporation. After replacement, press and hold the + and - buttons for 6 seconds.



Press for 6 seconds



Pairing. The ClimaRad S-Fan+ can be linked to other ClimaRad products. Press the buttons briefly and simultaneously.



Press briefly and simultaneously