

# Maintenance Instructions ClimaRad Sensa V2X

## Maintenance frequency for filters

When should you replace the filters?


- With normal use, every 2 years or earlier if the message 'Filter vervuild' appears on the display (for example in homes and offices).
- In the case of intensive use, after 1 year or earlier if the message 'Filter vervuild' appears on the display (e.g. for care homes and schools).

### Ordering filters


Order new filters at

[www.climarad.nl/filters](http://www.climarad.nl/filters)


## Replacing air supply filters

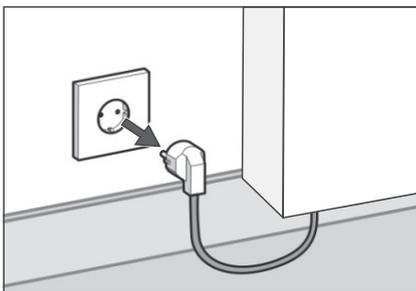


1. Switch off the device first by removing the plug from the socket.

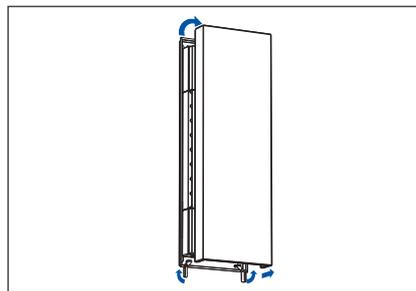


2. Turn the two locking hooks (at the bottom or on the side of the housing). Remove the cover of the Sensa by lifting it upwards.

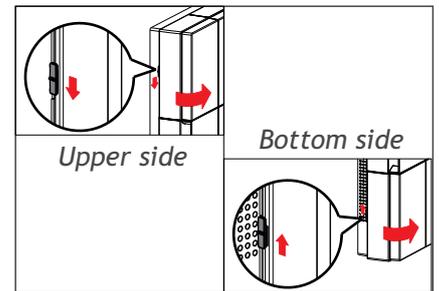


3. Push the upper and lower slide on the right side of the ClimaRad inwards and open both covers by pulling them towards you.

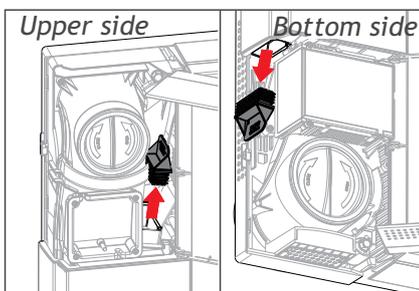


4. Remove the black filter caps on the left and right.

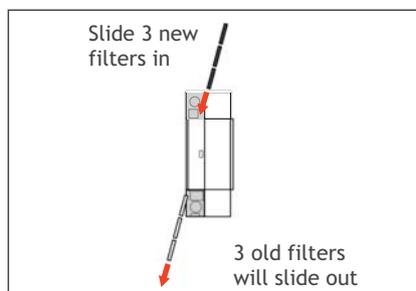


5. Slide the three new filters in the unit from the upper side. The old filters will automatically slide out on the bottom side.

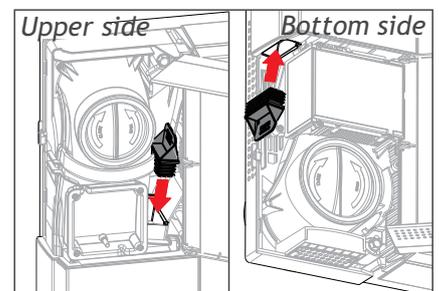


6. Replace the black filter caps on the upper and bottom side.

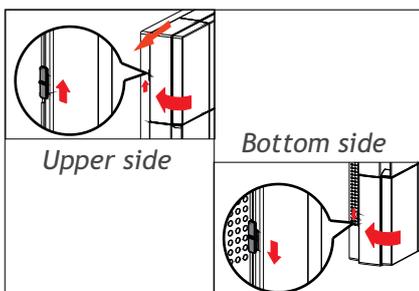

7. Close the covers on the upper and bottom side of the unit, and slide both latching slides outwards.

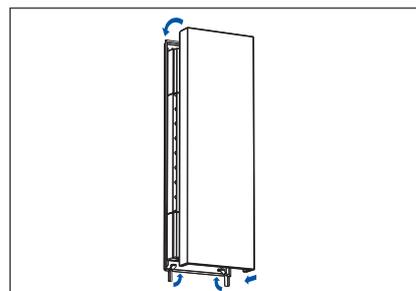

8. Put the cover back on and turn the locking hooks (at the bottom or on the side of the housing).

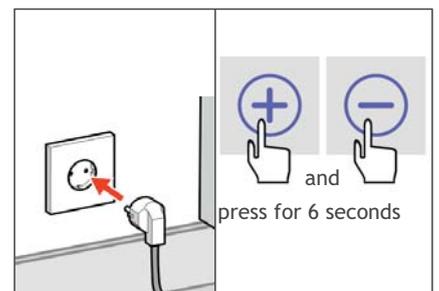


9. Push the plug back into the socket and reset the filter hour counter (by simultaneously pressing on the + and - on the display for 6 seconds). The message 'Filter vervuild' will disappear. Tighten the locking screws again.

**Important:** Reset the filter hour counter only if you have replaced the filters.


## Cleaning the air outlet filters

The air outlet filter is located at the right-hand side of the unit.


When visibly dirty, remove the dirt from the air outlet filter with a vacuum cleaner. This guarantees the flow of air. You do not need to remove the air outlet filter.

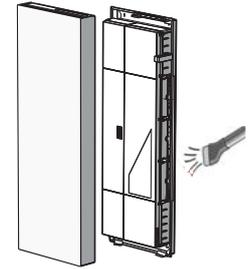

## Replacing the air outlet filters

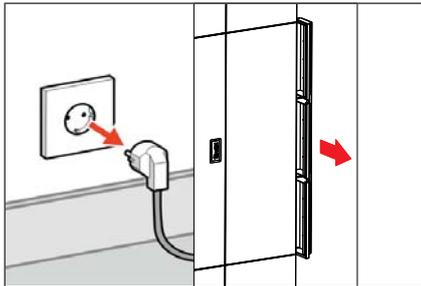


1. Pull the plug from the socket and pull the filter tray at the right side of the ClimaRad forwards.

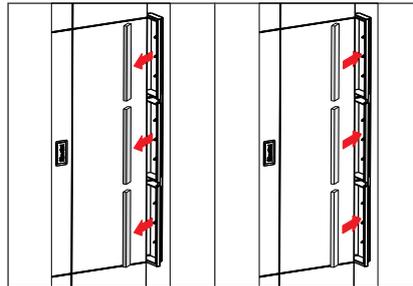


2. Remove the 3 filters from the tray.

3. Insert 3 new filters in the 3 sections of the tray and press down firmly.

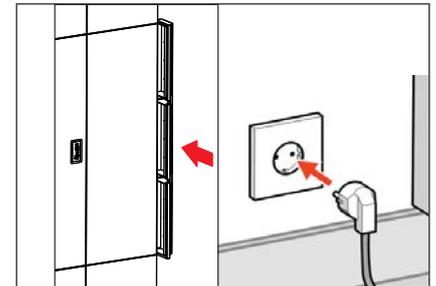


4. Slide the filter tray closed until you hear a clicking sound. Push the plug back into the socket.


## Cleaning the air ducts

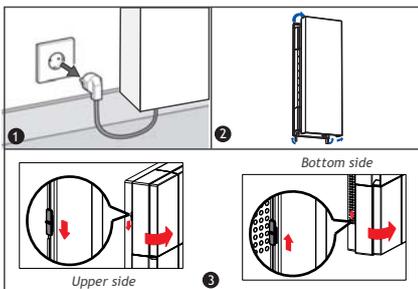


Follow the steps 1 to 3 under 'Replacing the air supply filters'.

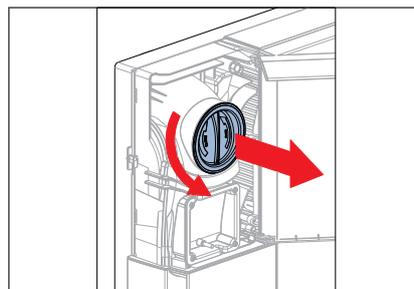


4. Turn both blue caps once against the direction of the clock and remove them.

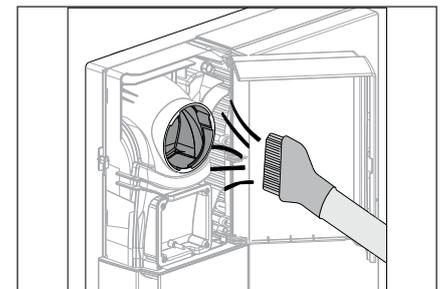


5. Remove any dirt from both channels with a vacuum cleaner or a soft cloth (do not use water).

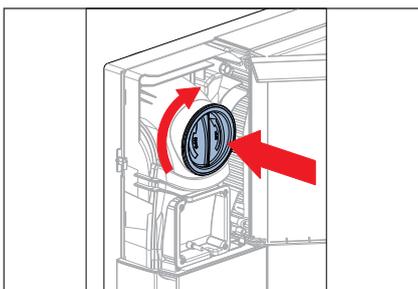

6. Push both blue filter caps fully back in for a correct operation and tighten.

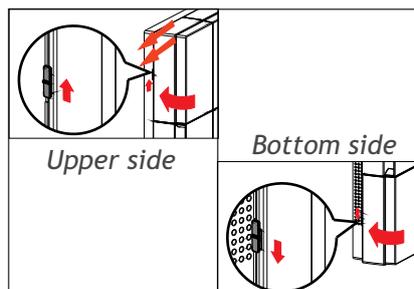

7. Close the covers on the upper and bottom side of the unit, and slide both latching slides outwards.

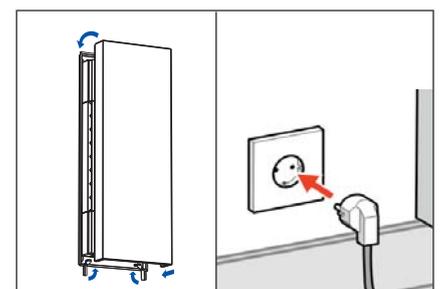

8. Put the cover back on and turn the locking hooks (at the bottom or on the side of the housing). Push the plug back into the socket.