


User instructions ClimaRad Ventura V1C-V

Operating principle ClimaRad Ventura V1C-V

The ClimaRad Ventura V1C-V is fitted with sensors for CO₂, humidity, indoor and outdoor temperature. These measure the air quality and determine the ventilation needed per room automatically. The device is fitted with convectors which enable the unit to ventilate, heat and cool (if needed).

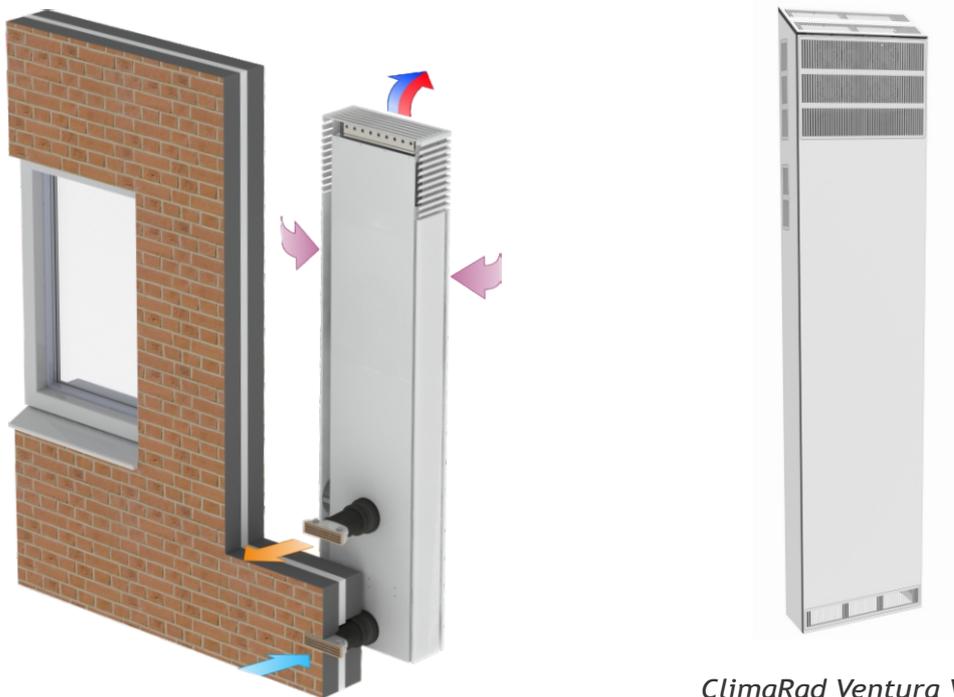

ClimaRad Ventura V1C-V

Operating the ClimaRad Ventura V1C-V

The control panel is located on the inside of the unit, behind the vandal-proof case. You can find the function buttons and notifications of the panel in question on page 2 of this instruction manual.

The ClimaRad Ventura V1C-V in your room is optimally configured by the installer and functions fully automatically. That is why we only explain the function buttons that are relevant for you during daily use.

Operating the ClimaRad Round (optional)



You can set the desired temperature yourself by turning the ring. Turn left for lower temperatures, turn right for higher temperatures.



Function Keys



Automatic control: The ventilation, heating and cooling system in the room are automatically controlled by your ClimaRad Ventura, which functions based on CO₂ measurements and temperature.



Temperature: You can set the desired temperature yourself using the + and - on your control panel in order to heat up or optionally cool down the room.



Pause: Use this function if you want to stop ventilating temporarily. After a period of 4 hours, your ventilation unit will reset to automatic control.



Ventilation (manual): This function allows you to activate the ventilation function of your device. You can then use the + and - on your control panel to configure the ventilation speed. After a period of 8 hours, your device will reset to automatic control.



Child lock: This key combination locks your control panel. Press the indicated buttons simultaneously for 4 seconds. If you want to unlock the device, repeat this action.

Messages

Switch off



Child lock: The child lock is activated.



Press 4 seconds simultaneously



Error: A fault has occurred. Please contact your installer or housing corporation.

filter vervuuld

Dirty filter: Replace the air filters or contact your installer or housing corporation After replacing the filters, press the + and - buttons for 6 seconds.



Press for 6 seconds

Function keys installer/property manager



Turn cooling function off/on: Only applicable for system with cooling system. You switch it on or off by pressing the button for 5 sec.