


Maintenance Instructions ClimaRad Fan

Cleaning the Fan


How do you maintain your ClimaRad Fan?

Depending on its use, the ClimaRad Fan must be thoroughly cleaned every 4 years.


When used in a very polluted area we recommend that you check every year to see if cleaning is required.

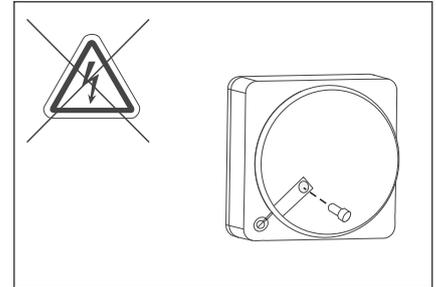


1. Disconnect the power in the electrical box and remove the locking screw.

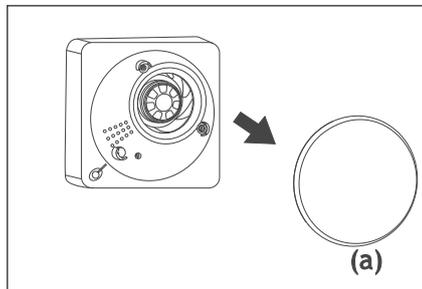


2. Remove the round cover (a) by pulling it off and inspect the fan for dirt.

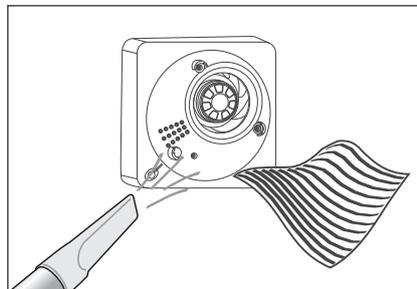


3. In the event it is only slightly dirty the dirt and debris can be removed with a soft, lint-free cloth or vacuum cleaner.

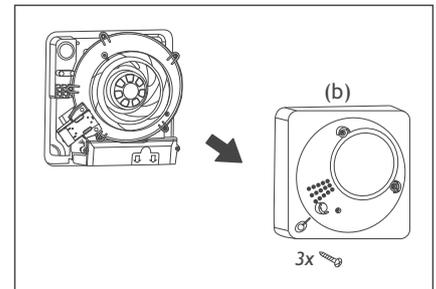


4. In the event it is very dirty the three screws of the inner housing (b) must be loosened and the inner housing removed.

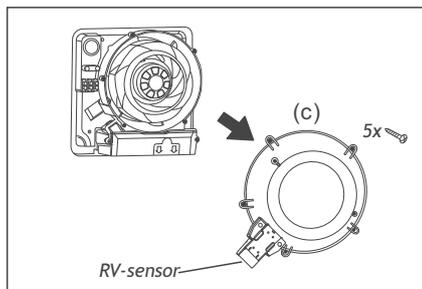


5. Disconnect (if present) the RV sensor and remove the 5 screws of the boiler cover (c).

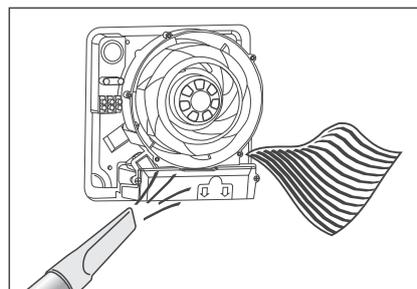


6. Remove the dirt and debris with a soft, lint-free cloth or vacuum cleaner.

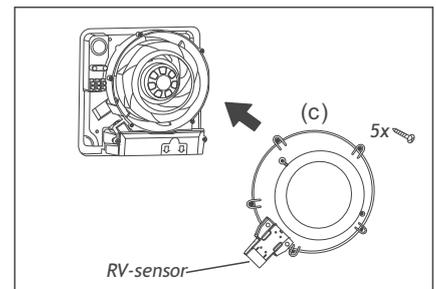


7. After cleaning, replace the cover (c) and reconnect (if present) the RV sensor.

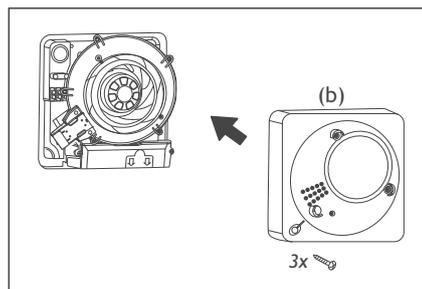

8. Install the inner housing (b) on the ClimaRad Fan. Tighten the 3 screws.

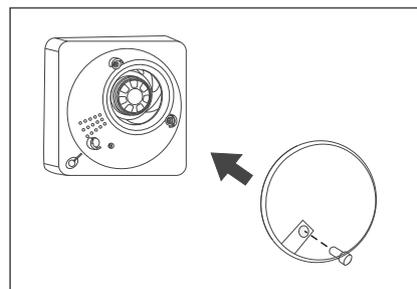

9. Replace the cover and tighten the locking screw.

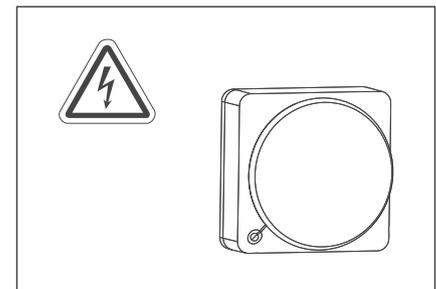

10. Reconnect the power in the electrical box.