


Operating instructions 4-position switch S-Fan

Description and application

Using the wireless RF 4-position switch, your ClimaRad S-Fan can be operated manually.

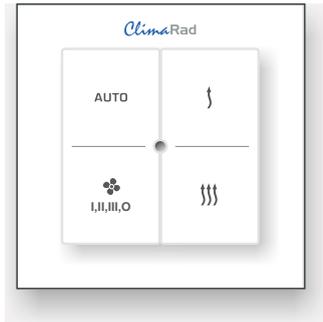

4-position switch S-Fan

By default, the ClimaRad S-Fan operates fully automatically (AUTO mode).

However, the automatic control can be manually overridden by the ❀ I, II, III, O (low, medium, high and pause) mode.

The comfort button (}) and heating button (}}}) have no function, only on an S-Fan+ are these buttons enabled.

Setting options and operation of 4-position switch ClimaRad S-Fan

Button	number of press	duration	action
AUTO	1	<1s	automatic
❀ I	1	<1s	low setting
❀ II	2	<1s	middle position
❀ III	3	<1s	high setting
❀ O	4	<1s	pause
}			no function
}}}			no function
❀ I, II, III, O + }}}	1	3-6 s	connect modus

If a button is pressed longer than indicated, no action is performed and the switch switches to standby to conserve battery power.

LED colour	flashing	description
green	1x	mode changed/normal operation
green	2x	link with S-Fan successful
orange	1x	low battery/start-up
orange	2x	S-Fan displays message 'filter dirty'
red	1x of 2x	Contact corporation/landlord

After using the switch correctly, the LED results are displayed, as described in the table opposite.