


# Operating instructions for 4-position switch S-Fan+

## Description and application

Using the wireless RF 4-position switch, your ClimaRad S-Fan+ can be operated manually.

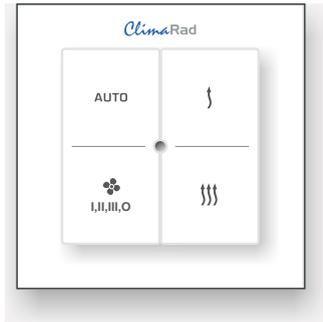

4-position switch S-Fan+

By default, the ClimaRad S-Fan+ operates fully automatically (auto mode).

However, the automatic control can be manually overridden by the ❁ I, II, III, O (low, medium, high and pause) mode.

When the comfort button (⌋) is on, the outside air is preheated to 12°C. After a period of 4 hours, the ClimaRad S-Fan+ switches back to automatic control.

When the heating function (⌋⌋⌋) is switched on, the room is additionally heated. After a period of 2 hours, the ClimaRad S-Fan+ switches back to automatic control.

## Setting options and operation of 4-position switch ClimaRad S-Fan+

Button	number of press	duration	action
AUTO	1	<1s	automatic
❁ I	1	<1s	low setting
❁ II	2	<1s	middle position
❁ III	3	<1s	high setting
❁ O	4	<1s	pause
⌋			no function
⌋⌋⌋			no function
❁ I, II, III, O + ⌋⌋⌋	1	3-6 s	connect modus

If a button is pressed longer than indicated, no action is performed and the switch switches to standby to conserve battery power.

LED colour	flashing	description
green	1x	mode changed/normal operation
green	2x	link with S-Fan successful
orange	1x	low battery/start-up
orange	2x	S-Fan displays message 'filter dirty'
red	1x of 2x	Contact corporation/landlord

After using the switch correctly, the LED results are displayed, as described in the table opposite.