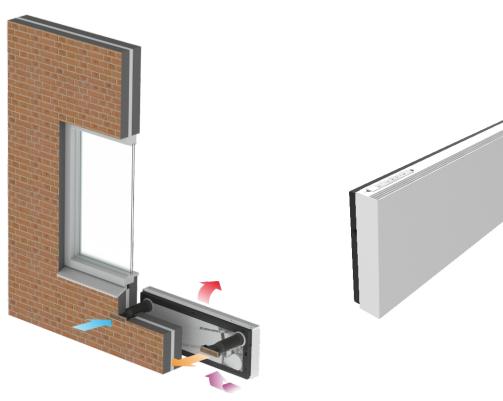# User instructions ClimaRad Sensa H2X

Operating principle ClimaRad Sensa H2X

The ClimaRad ventilation unit achieves optimal air quality through ventilation and air filtration. The built-in heat exchanger ensures that as little heat as possible is lost. The ClimaRad Sensa H2X is a horizontal ventilation unit with built-in heat exchanger and sensors for CO_2, relative humidity, indoor temperature and outside temperature.

Operating the ClimaRad Sensa H2X

The control panel is located on the top of the device.

Control panel

The ClimaRad Sensa H2X in your room is adjusted optimally by the installer and works completely automatically. This is why we will only explain the function buttons that are relevant for you in daily use.

ClimaRad®

Function Keys

AUTO

<u>Automatic control.</u> The ventilation in the room is automatically controlled by your ClimaRad ventilation unit, which ventilates on the basis of CO_2 measurement.

You can set your desired ventilation speed yourself with the $\oplus$ and the $\ominus$ on your control panel. After a period of 4 hours, your ClimaRad switches back to the automatic control.

<u>Pause.</u> Use this feature when you temporarily do not want to ventilate. After a period of 4 hours, your ClimaRad switches back to the automatic control.

<u>Maximum ventilation.</u> Your ClimaRad will ventilate to the maximum with this 'boost' function. Use this feature to expel unpleasant odours such as smoke or cooking smells. After a period of 4 hours, your ClimaRad switches back to the automatic control.

<u>Ventilate with cooler outside air.</u> Your ClimaRad ventilates with outside air when it is at least 2 degrees colder outside than the air in your room. After a period of 8 hours, your ClimaRad switches back to the automatic control. With the $\oplus$ and $\ominus$ you can determine the speed yourself. For example, use this feature in the summer when you want to lower the temperature in your warmed-up room by a few degrees at night.

<u>Child safety lock.</u> This key combination locks your control panel. Press the indicated keys simultaneously for 4 seconds. If you want to unlock it, perform this action again.

Messages — Switch off

Messages		Switch off
🔒	<u>Child lock.</u> The child lock is activated.	⏸ ⏩ ⏎ Press 4 seconds simultaneously
✕	<u>Error.</u> A fault has occurred. Please contact your installer or housing corporation.	
filter vervuild	<u>Dirty filter.</u> Replace the air filters or contact your installer or housing corporation After replacing the filters, press the $\oplus$ and $\ominus$ buttons for 6 seconds.	$\oplus$ $\ominus$ Press for 6 seconds